

# FB4 and OSC

FB4 can be controlled through OSC. If you use the right syntax, you will be able to control all FB4's in your network.

## FB4 Address prefix

The FB4 OSC address is based on the serial-number. The OSC address is buildup as follow:

```
/FB4-*serial number*/  
/*serial number*/
```

The address always contains 5 numbers.

If the FB4 serial number is 1234 the actual FB4 OSC address will be

The following examples shows how you can set the parameter mode on FB4 with serial 2356.

```
/FB4-01234/operation_mode
```

```
/01234/operation_mode
```

From:

<http://wiki.pangolin.com/> - **Complete Help Docs**

Permanent link:

[http://wiki.pangolin.com/doku.php?id=hardware:fb4:osc\\_commands&rev=1582651191](http://wiki.pangolin.com/doku.php?id=hardware:fb4:osc_commands&rev=1582651191)

Last update: **2020/06/11 19:21**

