

# Enable Laser Output button

The Enable Laser Output button is found at the far right of the toolbar, just above the Laser Preview window.



## Enabling laser output

In order to enable output from the FB3 laser controller, the Enable Laser Output button must be pressed.

## Laser output is always disabled by default

Since there is a possibility that an untrained operator might activate the laser during a time that is not appropriate (for example, when workers are in a room preparing for an event), laser output is always disabled by default, and it is always required for the laser operator to consciously activate laser output.

### All editors and setup windows also have their own Enable Laser Output (Show it now) button

The **Enable Laser Output** button on the QuickShow toolbar is not the only Enable Laser Output button. In fact, each editor window, and setup window within QuickShow also has a button named **Show it now** which will enable the output from that specific window. Again, the laser operator must consciously enable laser output in order to get any output from QuickShow.

---

See Also

- [Blackout and Pause buttons](#)
- [Main Control Window](#)

[Return to Index](#)

From:  
<https://wiki.pangolin.com/> - **Complete Help Docs**

Permanent link:  
[https://wiki.pangolin.com/doku.php?id=quickshow:enable\\_laser\\_output](https://wiki.pangolin.com/doku.php?id=quickshow:enable_laser_output)

Last update: **2020/06/11 19:20**



