


Utility: Connection to BEYOND

This panel allows you to connect to, and disconnect from BEYOND.

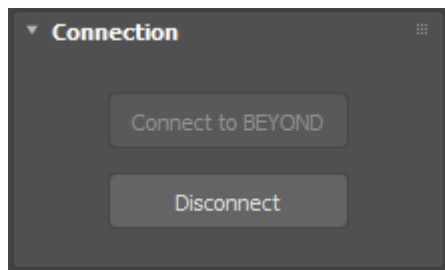

As long as you start BEYOND before starting 3ds Max, then the plugin will automatically start and connect to BEYOND.

[Go Back](#)

From:
<http://wiki.pangolin.com/> - **Complete Help Docs**

Permanent link:
http://wiki.pangolin.com/doku.php?id=tools:lcmax:file_operations&rev=1619984812

Last update: **2021/05/02 21:46**

