Send packages to BEYOND

BEYOND accepts incoming TCP and/or UDP signals on the "Talk Client service". By enabling this service, BEYOND will accept custom PangoScript commands. The sender of the package can be any application that is capable to send TCP and or UDP commands.

The advantage of this is that that this allows you to control BEYOND over ethernet. The example configuration shown below uses the free utility package sender to send commands to BEYOND. This could even be your own application.

Enabling Talk server and client

ettings Run Update Help Language

Open Settings » network » "BEYOND Talk server" and "BEYOND Talk client"



Now you need to enable the Talk server service and talk server client service in the network settings window. Open up **Settings** » **network** » **Network settings**.

The default ports used are 16062 for UDP and 16063 for TCP. You can also change the ports used for these two services.



Package sender example

Download and install the free application Package Sender.

After opening package sender, configure it like shown as the screenshot below.

Note that the address needs to be replaced to the IP address of the computer that is running BEYOND. If BEYOND is running on the same machine, the IP address will be 127.0.0.1.

In this case I am sending the command "SetBpm 120" but BEYOND accepts all PangoScript based commands.

Note that every command needs to be followed by $r \in CR$ LF aka line separator) as shown below.

Packet Sender - IPs: 10.37.1	29.2, 10.211.55.2, 10.10.1.150, 1	0.10.1.111, fe80::1%lo0	, fe80::1852:9e24:42	31:243d%en1, fe80::1c	00:4760:fa0:e9
Name Test Package					
ASCII SetBpm 120\r\n					*
HEX 53 65 74 42 70 6d 20 31 32	30 Od Oa			*	Load File
Address 10.10.1.148	× Port 16062	× Resend Delay	0 *	🖴 UDP 💲 Send	Save
Search Saved Packets			Del	ete Saved Packet	Persistent TCP
Send Name Reserd (sec)	To Address To Port	Method ASCII		Hex	
	This should be the running BEYOND	IP of the com	outer		
Clear Log (1)		✓ Log Traffic Sa	ve Log Save Tr	affic Packet Copy	/ to Clipboard
e v From IP From Port	To IP To Port	Method Error	ASCII	Hex	
):40.9 You 53049	10.10.1.148 16062	UDP	SetBpm 120\r\n	53 65 74 42 70 6d 20) 31 32 30 0d 0a
		🖕 UDP:53049	👛 TCP:56551	📥 SSL:56552	IPv4 Mode

From: http://wiki.pangolin.com/ - **Complete Help Docs**

Permanent link: http://wiki.pangolin.com/doku.php?id=beyond:package-sender



Last update: 2020/06/11 19:20