


Akai APC40 Layout Advanced V1.9

PANGOLIN LASER SYSTEMS

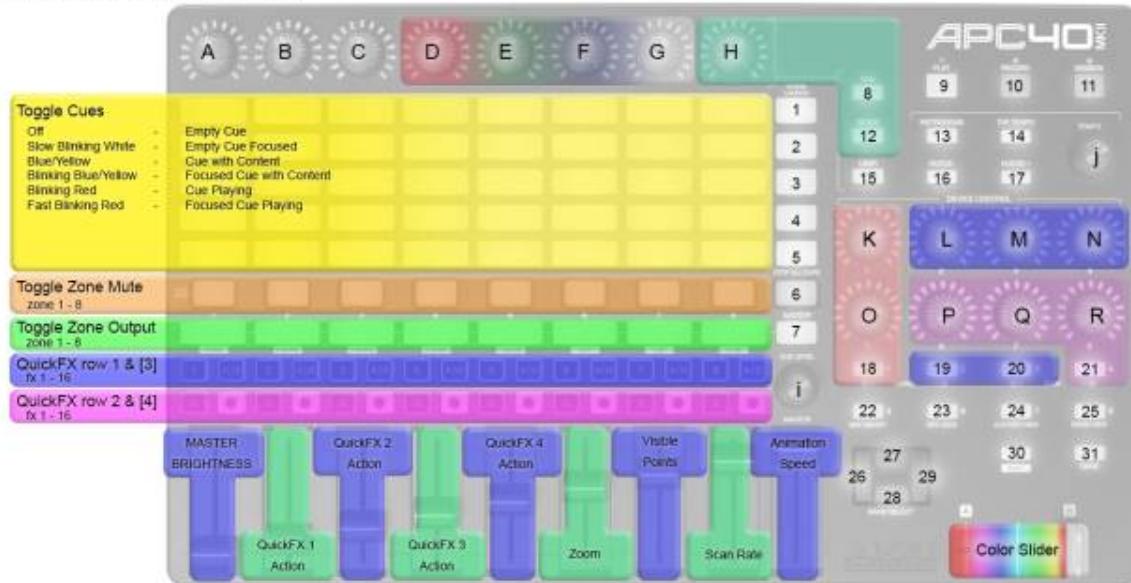

APC40MKII

Template Version 1.9 for BEYOND 2.1 b790 and up

After BEYOND is finished initializing the midi controller, move all sliders to your preferred start position.

The ScanRate is limited to values set in the "projector settings" scan rate tab.

Commands between [] are only available while holding down the Shift button (button 30).

1 - Master Pause	11 - Blackout	21 - Reset Angle	31 - Capture QuickCapture
2 - Toggle Physics	12 - Previous Transition	22 - Live and QuickFX to Master	[Store In focused Cue]
3 - Invert Play Direction	13 - Resync [Toggle VLJ]	23 - Live and QuickFX to Cue	A - Size X
4 - Swap playing Cue [Previous Cue]	14 - Tap Beat [Set BPM to 120]	24 - Live and QuickFX to Zone	B - Size Y
5 - Toggle Muted Zones by BPM	15 - Toggle lock XY Size	25 - Alpha Pulse (All Zones)	C - Fog/Haze (DMX address 1)
6 - Toggle Muted Zones Manually	16 - BPM Divided by 2 [by 4]	26 - Previous category [focus to left]	D - Red
7 - Reset Zone and Mute Selection	17 - BPM Multiplied by 2 [by 4]	27 - Previous Page [focus one up]	E - Green
8 - Next Transition	18 - Reset Position	28 - Next Page [focus one down]	F - Blue
9 - Enable Laser Output	19 - Stop rotation [Reset rotation]	29 - Next category [focus to right]	G - Alpha
10 - Disable Laser Output	20 - Invert rotation	30 - Shift [activates Layer 2]	H - Transition Speed
			I - Friction [Mass]
			J - BPM Shift
			K - Position Y
			L - Rotation X
			M - Rotation Y
			N - Rotation Z
			O - Position X
			P - Angle X
			Q - Angle Y
			R - Angle Z

From:

<https://wiki.pangolin.com/> - Complete Help Docs

Permanent link:

<https://wiki.pangolin.com/doku.php?id=beyond:akaiapc40mkiilayout&rev=1568055997>

Last update: 2020/06/11 19:23

