

Send TCP packages to BEYOND


BEYOND accepts TCP incoming signals on the TCP Talk Client service. By enabling this service, you can send custom PangoScript commands to BEYOND. The sender of the package can be any application that is capable to send TCP commands.

The advantage of this is that that this allows you to control BEYOND over ethernet. This configuration uses the free utility package sender, but this could even be your own coded program.

Enabling TCP Talk

Enable through


settings » network » “BEYOND Talk server” and “BEYOND Talk client”

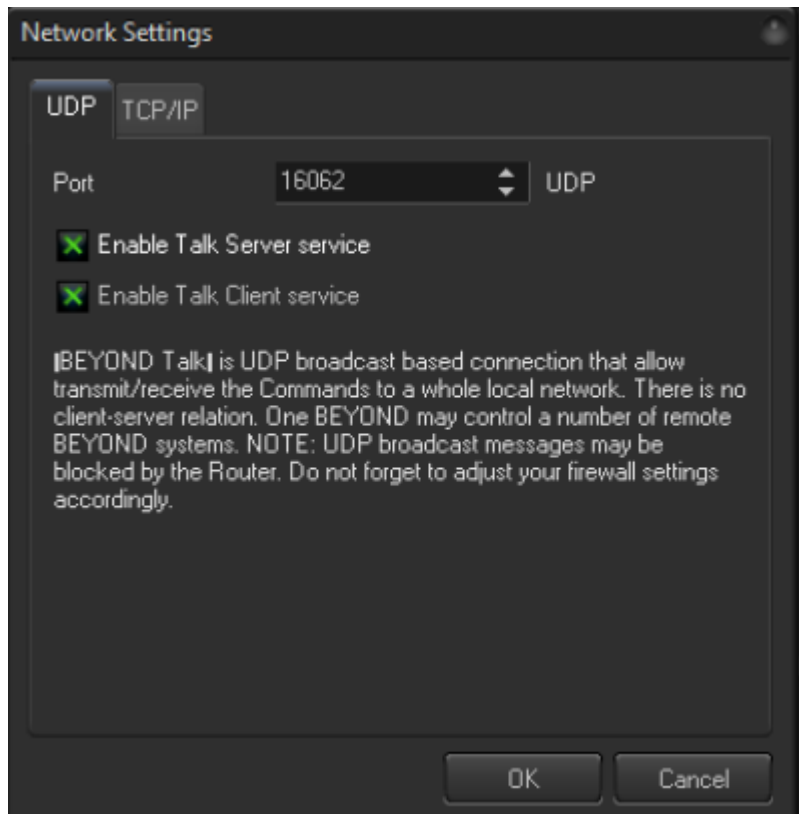

The default ports used are 16062 for UDP and 16063 for TCP. Now you need to enable the Talk server service and talk server client service in the network settings window. Open up

Settings » network » Network settings.

Here you can also change the ports used for these two services.

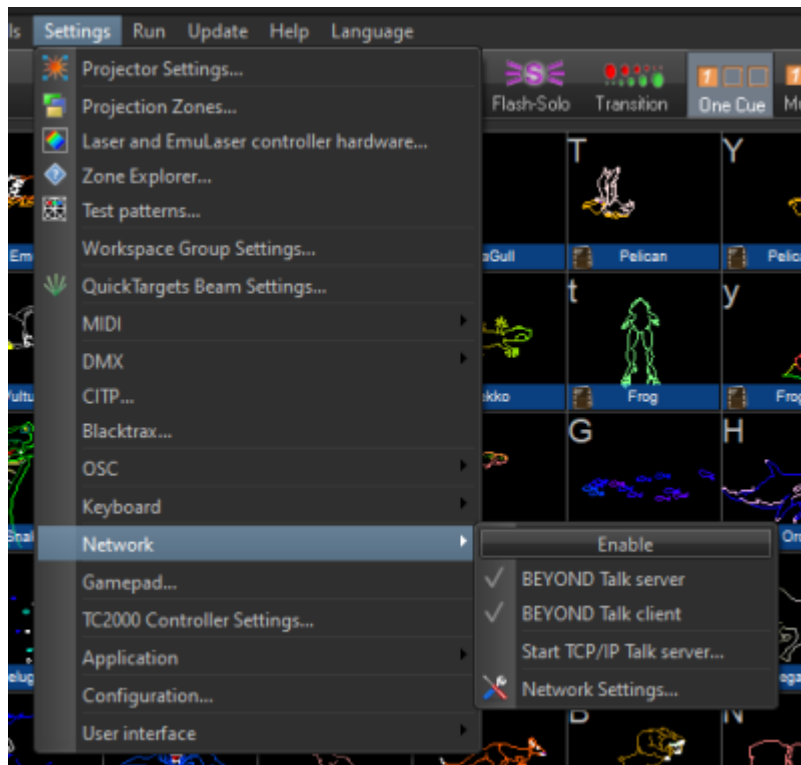

From:

<https://wiki.pangolin.com/> - **Complete Help Docs**

Permanent link:

<https://wiki.pangolin.com/doku.php?id=beyond:package-sender&rev=1582715041>

Last update: **2020/06/11 19:23**

