

# How to Use the Laser Control Hardware Window

---

**Video description:** This video shows Laser control hardware which will list all connected FB3 and FB4. This windows will allow you to change the order of the hardware. This will reflect in the projector settings window and in the bottom bar.

## Chapters

- Hardware window
  - Hardware list and order
  - New Hardware
- 

[Return to tutorial videos](#)

From:

<https://wiki.pangolin.com/> - **Complete Help Docs**

Permanent link:

[https://wiki.pangolin.com/doku.php?id=quickshow:video:quickshow\\_quickhints\\_laser\\_control\\_hardware\\_window](https://wiki.pangolin.com/doku.php?id=quickshow:video:quickshow_quickhints_laser_control_hardware_window)

Last update: **2023/03/08 11:49**

