

How to Use the Projector Settings Window

Video description: This video shows you how to use the projector settings window. This allows you to change the settings of a specific piece of hardware. This includes size, scanrate limits (minimum and maximum speed), color settings (TTL/Analog), color shift, vector settings, blanking and anchors.

Chapters

- Projector settings window overview
 - Size and position
 - Scanrate and color shift
 - color settings
 - Vector display and track settings
 - Information tab and others
-

[Return to tutorial videos](#)

From:

<http://wiki.pangolin.com/> - **Complete Help Docs**

Permanent link:

http://wiki.pangolin.com/doku.php?id=quickshow:video:quickshow_quickhints_projector_settings_window

Last update: **2023/03/08 11:51**

