

# How to Use the Projector Settings Window

---

**Video description:** This video shows you how to use the projector settings window. This allows you to change the settings of a specific piece of hardware. This includes size, scanrate limits (minimum and maximum speed), color settings (TTL/Analog), color shift, vector settings, blanking and anchors.

## Chapters

- Projector settings window overview
  - Size and position
  - Scanrate and color shift
  - color settings
  - Vector display and track settings
  - Information tab and others
- 

[Return to tutorial videos](#)

From:

<https://wiki.pangolin.com/> - **Complete Help Docs**

Permanent link:

[https://wiki.pangolin.com/doku.php?id=quickshow:video:quickshow\\_quickhints\\_projector\\_settings\\_window](https://wiki.pangolin.com/doku.php?id=quickshow:video:quickshow_quickhints_projector_settings_window)

Last update: **2023/03/08 11:51**

