

How to Use the Projector Settings Window

Video description: This video shows you how to use the projector settings window. This allows you to change the settings of a specific piece of hardware. This includes size, scanrate limits (minimum and maximum speed), color settings (TTL/Analog), color shift, vector settings, blanking and anchors.

[Return to tutorial videos](#)

From:

<https://wiki.pangolin.com/> - **Complete Help Docs**

Permanent link:

https://wiki.pangolin.com/doku.php?id=quickshow:video:quickshow_quickhints_projector_settings_window&rev=1678182250

Last update: **2023/03/07 10:44**

